



 
S·E·M
audio laboratories



DE – Betriebsanleitung
FR – Mode d'emploi
IT – Istruzioni per l'uso
EN – Instruction manual

Fusion Z-7799



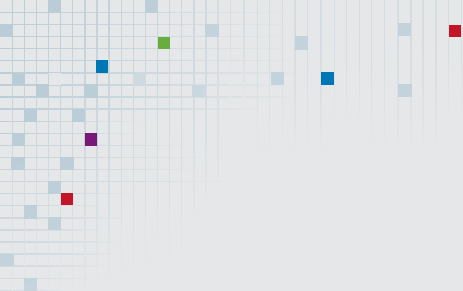



Dear customer

Finally arrived at YA! Take a seat and enjoy the world of YA! You will see: It is a wonderful place to be.

The appliance must only be used for the intended purpose according to these instructions.

Keep the instructions carefully and pass them on to further users.

The manufacturer reserves the right to change design, accessories or equipment without prior notice.

EN



Safety instructions

Carefully read the instructions before use. Keep the instructions, if you need to read it again or if you want to pass on the appliance.

- The appliance must only be connected to a voltage supply in accordance with the rating label on the supplied adapter. Voltage supply information to be found on the label of the adapter.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not allow power cable to hang down within easy reach.
- Keep children away from packing material (e.g. plastic bags).
- Disconnect the mains plug in case of faults during use, before cleaning or moving the appliance from place to place, after use.
- Never pull the plug out of the socket by the cable or with wet hands. Don't pull the cable over sharp edges. Don't jam it. Don't bend it.
- If the supply cable is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid hazard.
- Regularly check if the mains cable / appliance / extension lead is defective.
- Only trained personnel should repair electrical appliances. Unskilled repairs can cause considerable danger to the user.
- Do not use attachments not recommended by the manufacturer.
- Never put the appliance / cable on hot surfaces or near open flames.



Safety instructions

- Never subject the appliance, power cable or plug to moisture, water or any other liquid.
- Never attempt to open the casing of the appliance.
- Position the appliance so that it has sufficient ventilation. Never block the ventilation openings. Ensure that no objects or liquids enter the ventilation openings.
- The equipment contains a laser radiating laser rays according to the limit of laser product of class 1.
- Batteries must not be exposed to excessive heat such as direct sunlight, fire and the like.
- If the battery leaks, remove it, clean the contacts of the appliance and wash your hands.
- If you do not use the appliance for a long time, remove the battery.
- Where the mains plug is used as the disconnect device, it shall remain readily operable.
- Listening with headphones for long periods at full volume may cause damage to the hearing.
- Switch the appliance off and pull the plug out of the mains when it is not in use. Don't pull the cable around the appliance. The appliance is only cut from the mains if the plug is pulled out!



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



Safety instructions

Electrostatic precautions:

An electrostatic discharge at any point of the device can lead to a functional failure, or to turn off the device. This is an intentional response and serves to protect the equipment. If this happens, please unplug, wait several seconds and then plug the device back on line. Thus, the device is reset to its normal state.

WARNING



There is a danger of explosion if batteries are exchanged improperly. Only replace batteries with ones of the same type.

- Do not put any container (f. ex. vases, etc.) containing liquids on or in the surroundings of the appliance.
- Subject to technical modifications. No liability for typographical errors.

Key to symbols



WARNING

This symbol and WARNING heading is used when failure to follow or non compliancy with the operating and work instructions as well as with prescribed work procedures and the like, may cause injuries or fatal accidents.



CAUTION

This symbol and CAUTION heading is used when failure to follow or non compliancy with the operating and work instructions as well as with prescribed work procedures and the like, may cause damage to the appliance.



NOTE

This symbol and the heading NOTE apply to technical requirements that the user must pay attention to during the activities.



Proper use of the appliance


The appliance is designed for household use and not for industrial operation. Any other use is improper and could endanger persons.

EN

Improper use of the appliance

No warranty for any possible damage can be accepted if the appliance is improperly used, incorrectly operated or repaired unprofessionally. In such a case, any warranty claim is void.

Disposal of old electrical appliances

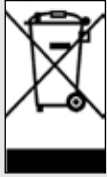

This product shall not be disposed off in the EC/Switzerland with the household waste. Before disposal, remove the battery. Make worn out appliances unusable. Pull out the mains plug and sever the cable. Return electrical appliances to a shop of sale or dispose of product and battery separately in accordance with local regulations. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Scope of delivery

.....
1 x Fusion Z-7799 Home Cinema System

.....
2 x Speaker

.....
2 x Stand (for loudspeakers)

.....
1 x Stand (for Home Cinema System)

.....
1 x Subwoofer

.....
1 x Docking station

.....
8 x Screws and dowels

.....
1 x Mains plug/mains cable

.....
1 x Remote control (incl. battery)

.....
7 x Different adaptors

.....
1 x Instruction manual

10 Fusion Z-7799

Technical data

Power supply AC 100 V-240 V ~ 50/60 Hz

Power consumption Standby: 1 W
In operation: 52 W

Dimension Appliance: 410 x 178 x 175 mm without stand
Speaker: 270 x 178 x 175 mm without stand
Subwoofer: 220 x 240 x 240 mm
Docking station: 86 x 192 x 110 mm

Weight Appliance: 2.3 kg
Speaker: 2.3 kg
Subwoofer: 5.5 kg
Docking station: 0.34 kg

Speaker 28 W x 2 + 18 W x 2 + 35 W

Amplifier 10 W x 2 + 20 W = 40 W (RMS)


Protection Class 2

EN

Position the appliance


Attach stand (base and loudspeaker)

Place the stand under the unit and slide it forward

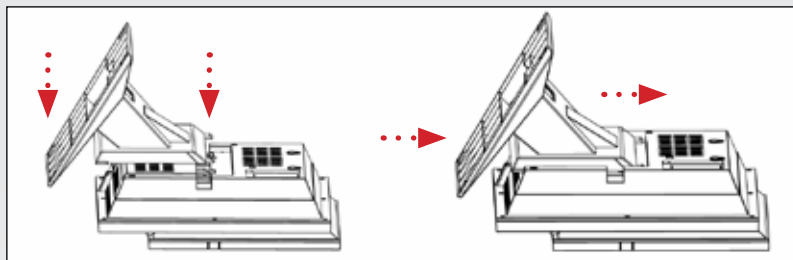

Stop when the indicator arrow mark is aligned with the mark at the unit.

(To release the stand press the clip and and slide the stand downwards)

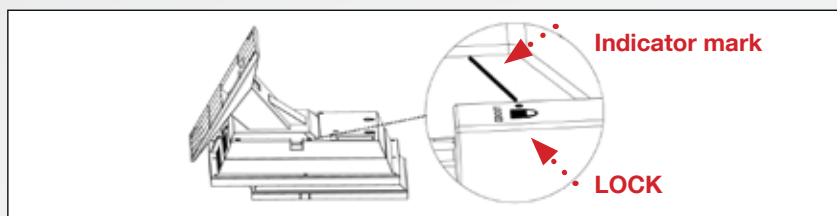

Operation


Insert backup batteries

The backup batteries save the wake-up function in the event that the power supply is interrupted.

Insert two 1.5 V batteries (AA/UM-4/LR03) (not included).

The remote control can only be used with batteries.

Insert 2 x 3 V, CR 2032 battery (included in the scope of delivery).

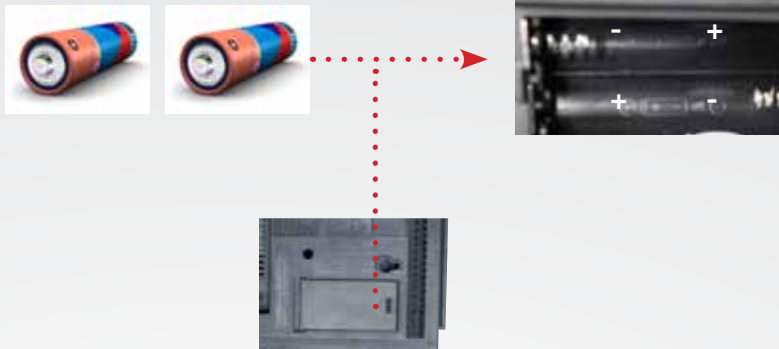


Operation

Operation of the appliance

The appliance is equipped with an AC adaptor, rating DC = 15 V, 3 A and a plug:


- Only connect the appliance with the supplied adaptor and mains supply.
Use of other adaptors may damage the unit or cause it to malfunction.
- 1. Plug the tail end of the AC-adaptor into the DC-jack (socket)
2. Connect the mains plus to the mains

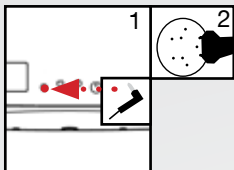

- **ON / STANDBY** to switch on the appliance



Appliance

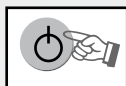

Remote control

- The appliance cannot be completely switched off. It is either in operation or in Standby mode.
- The display is dimmed in standby mode, time is displayed.
- Power consumption is reduced in standby mode.

Remote control

- Carefully remove the transparent plastic foil from the battery compartment and test if the appliance reacts on the remote control with **ON / STANDBY**

Operation

Wall installation

- This unit can be fastened to the wall.
- Screws: 3.5 x 34 mm (8 screws supplied)



WARNING

The unit may only be mounted on vertical walls. Check before installation whether the wall can bear three times the weight of the unit. Bring in a qualified craftsman if in doubt, and in any case to drill the holes.

Connections


- The Fusion-Z 7799 Home Cinema System can be connected to normal household mains power sockets.
- Check that the power supply rating is adequate for the unit.
- Connect the mains plug of the unit and of the subwoofer to the mains power supply
- Switch on the unit and the subwoofer with **ON / OFF**.

Connect the loudspeaker to the subwoofer

- Release the connecting cable of both loudspeakers from the binding.
- Two cables per loudspeaker: 1 x WHITE (clear) and 1 x BLACK
- WHITE cable left-hand loudspeaker, connect with RED L+ to the subwoofer
- BLACK cable left-hand loudspeaker, connect with BLACK L- to the subwoofer
- Do the same with the right-hand loudspeaker: Connection to R + and R-
- To connect the cables; press the RED and BLACK knobs respectively against the subwoofer, connect the cable, release the knob
- Locate the loudspeakers in the room to give the best sound quality

Bass control subwoofer

- The bass can be set at any time at the back of the subwoofer with the Bass Level Control knob.

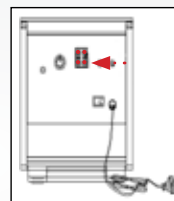



Connections

LIGHTCURRENT WIRELES AUDIO TECHNOLOGIE

The LIGHTCURRENT technology uses safe infrared light to connect without cables. The technology also functions over greater distances and eliminates errors in transmission at radio frequencies. The dock distributes uncompressed signals in all directions. These are reflected by walls, ceilings and even the device itself and thus always reach the 2.1 loudspeakers, regardless of where they are placed. They thus attain an incomparable quality of sound.

Overview Fusion Z-7799



18 Fusion Z-7799

- 1 Speaker
- 2 Stand (for loudspeakers)
- 3 Stand
- 4 Display
- 5 CD tray
- 6 FUNCTION
- 7 TUNER
- 8 EQ (Equalizer)
- 9 OPEN / CLOSE
- 10 ON / STANDBY
- 11 a Sensor remote control
b Lightcurrent® transmitter
- 12 TUNE DOWN
- 13 PLAY / PAUSE
- 14 TUNE U P
- 15 VOLUME +
- 16 MEM -
- 17 STOP ■
- 18 MEM +
- 19 VOLUME -
- 20 USB IN
- 22 HDMI OUT
- 23 AUDIO OUT
- 24 COAXIAL OUT
- 25 VIDEO OUT
- 26 S-VIDEO OUT

- 27 OPTICAL OUT
- 28 VIDEO COMPONENTS OUT
- 29 DOCK VIDEO OUT
- 30 AUX INPUT
- 31 Subwoofer OUTPUT
- 32 Connection for iPod
- 33 DC Jack (socket) (15 V)
- 34 Headphone socket

Subwoofer:



- 35 Lightcurrent® receiver
- 36 Bass ventilation
- 37 Lighting
- 38 Speaker
- 39 Bass Level Control
- 40 Connection for loudspeakers
- 41 ON / OFF
- 42 Mains plug / mains cable

iPod docking station

- 43 Display mains current and audio source
- 44 Dock for adaptor
- 45 Stand
- 46 Dock for iPod
- 47 iPod Docking Station connecting cable

Overview remote control Fusion Z-7799



- 
- 
- | | | | |
|----|--------------------|----|----------------|
| 1 | OPEN / CLOSE | 21 | RANDOM |
| 2 | ON / OFF | 22 | +IO |
| 3 | DVD / USB / SD | 23 | Numbers button |
| 4 | AUX / DOCK | 24 | PLAY / PAUSE |
| 5 | TUNER | 25 | STOP ■ |
| 6 | SLEEP | 26 | VOLUME - |
| 7 | TIMER | 27 | VOLUME + |
| 8 | ALARM | 28 | MUTE |
| 9 | CLOCK | 29 | UP |
| 10 | SLOW / INTRO | 30 | EQ (Equalizer) |
| 11 | AUDIO / STEREO | 31 | TUNE DOWN |
| 12 | TITLE / PLAYLIST + | 32 | ENTER |
| 13 | STEP ALBUM + | 33 | TUNE UP |
| 14 | GOTO / TRACK + | 34 | MEM - |
| 15 | ANGLE / PLAYLIST - | 35 | DOWN |
| 16 | ZOOM / ALBUM - | 36 | MEM + |
| 17 | SUBTITLE / TRACK - | 37 | MENU |
| 18 | OSD / INFO | 38 | SETUP |
| 19 | A-B / RDS | 39 | PROG. / MEM |
| 20 | REPEAT | 40 | Battery |



Set clock

The appliance is supplied with a digital clock. Time is displayed in two modes:

1. Standby mode Display shows actual time
2. ON mode The display does not show the current time.
Display: Press **CLOCK** on the remote control.

Choose display (12H/24H) UP ▲ resp. DOWN ▼

Confirm Press **CLOCK**

Set hour UP ▲ resp. DOWN ▼

Confirm Press **CLOCK**

Set minutes UP ▲ resp. DOWN ▼

Confirm Press **CLOCK**



NOTE If no key is pressed for 10 seconds, the appliance automatically returns to its initial function. The programming is not saved.



Set alarm

This appliance is supplied with a Timer function. It is used for programming to enable the appliance to shut off or on automatically. This function can be used as an alarm clock.



CAUTION The timer only works if the clock and the playback function (**DISC** / **USB** / **CARD** / **iPOD** / **TUNER FM**) have been set.

Press **TIMER** for 2 seconds

Set function	UP resp. DOWN (DISC / USB / CARD / iPOD / TUNER FM)
Confirm	Press TIMER
Set hour	UP ▲ resp. DOWN ▼
Confirm	Press TIMER
Set minutes	UP ▲ resp. DOWN ▼
Confirm	Press TIMER
Adjust volume	VOLUME + resp. VOLUME -
Confirm	Press TIMER



NOTE ☹ symbol on the display shows when the timer function is active. Press **TIMER** at the remote control to switch off the timer. ☹ Symbol disappears. If **TUNER FM** had been selected as a wake-up function, playback of the radio frequency that had last been selected starts.



SLEEP


This appliance is supplied with a **SLEEP** function. You can use it to have the appliance automatically shut off. This function can be used for example to sleep in with music.

Set minutes

Press **SLEEP** repeatedly

(10 / 20 / 30 / 40 / 50 / 60 / 70 / 80 / 90 / OFF)

OFF = **SLEEP** function is off.

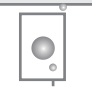

Musik Equalizer

This appliance has four pre-programmed sound adjustments.

Set EQ sound effects

Press **EQ** repeatedly

(EQ OFF / CLASSIC / ROCK / POP / JAZZ / BASS)



Setting the alarm (beep beep)

Switch off appliance

ON / STANDBY

Press **ALARM**

Set hour

UP ▲ resp. **DOWN ▼**

Confirm

Press **ALARM**

Set minutes

UP ▲ resp. **DOWN ▼**

Confirm

Press **ALARM**



MUTE

The volume of the appliance can be switched off temporarily.

Press **MUTE** Volume off

Press **MUTE** again Volume on



VOLUME

The volume can be adjusted either at the appliance or on the remote control. **VOLUME +** and **VOLUME -** - it is possible to hear a CLICK during the adjustment. The clicking stops once the desired loudness is achieved.



Playback

Start playback ►||

Interrupt playback ►||

Stop playback **STOP** ■

Select track |◀◀ **TUNE-** resp. **TUNE+** ▶▶|

Fast forward or
reverse within
the actual track Press and hold |◀◀ **PREV** resp. **NEXT** ▶▶|



Radio

Switch on appliance

Press **ON / STANDBY**

Choose **TUNER**

on the appliance or the remote control



NOTE Improve FM radio reception: Adjust the antenna wire (on the back of the appliance).
RDS information, if available, such as programme name, title name or contact details. To
get more information on the broadcaster Press **INFO** on the remote control

Adjust frequency

Scan manual

Press **◀◀ TUNE DOWN** resp. **TUNE UP ▶▶**

The scanning is being done in steps. Frequency is displayed.

Scan automatic

Press **◀◀ TUNE DOWN** resp. **TUNE UP ▶▶** for 2 seconds

Scans automatically, stops when the next station is found.

Save frequency

There are 20 memory positions.

Choose frequency

Press **◀◀ TUNE DOWN** resp. **TUNE UP ▶▶**

Confirm

Press **PROG / MEM**

Select memory slot number

Press **MEM -** resp. **MEM +**

Confirm

Press **PROG / MEM** on the remote control

Find a

saved frequency

◀◀ MEM - resp. **MEM + ▶▶**

Overwrite saved positions: save the new frequency on the desired position.



CD

- Check the the CD is not rotating any more before opening the CD tray.
Always press **STOP** ■ to stop the CD.
- Hold the CD by its edge and insert it with the printed facing the front.
- Once the CD has been inserted then close the CD tray (**OPEN / CLOSE** ▲).
- The CD is now ready to play back.
- To remove the CD, repeat the steps described above and again hold the CD by the edge, and take it out.

Switch on appliance

Press **ON / STANDBY**

Choose **CD**

DVD / USB / SD on the remote control

Inserting the CD

OPEN / CLOSE ▲

The CD automatically starts playback and shows the current title number in the display.

Start playback



Interrupt playback



Stop playback

STOP ■

Back to title 1

Press **STOP** ■ 2 x

Select track

Press ◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶

Fast forward or reverse

within the actual track:

Press ◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶ repeatedly

Speed 2x 4x 8x 20x

Set the normal playback speed again: press ▶▶||



CD-MP3

- Check the the MP3 CD is not rotating any more before opening the CD tray.
Always press **STOP** ■ to stop the CD.
- Hold the MP3 CD by its edge and insert it with the printed facing the front.
- Once the MP3 CD has been inserted then close the CD tray (**OPEN / CLOSE** ▲).
- The MP3 CD is now ready to play back.
- To remove the MP3 CD, repeat the steps described above and again hold the CD by the edge, and take it out.

Switch on appliance

Press **ON / STANDBY** ⏻

Choose

Press **DVD / USB / SD** on the remote control repeatedly

Inserting the MP3 CD

OPEN / CLOSE ▲

The MP3 CD automatically starts playback and shows the current title number in the display.

Select folder and title

◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶ or **UP** ▲ resp. **DOWN** ▼

Start playback

Press **ENTER**

Interrupt playback

▶||

Stop playback

STOP ■

Back to title 1

Press **STOP** ■ then press ▶||

Select track

Press |◀◀ **MEM -** resp. **MEM +** ▶▶|

Fast forward or reverse

within the actual track:

Press ◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶ repeatedly

Speed 2x 4x 8x 20x

Set the normal playback speed again: press ▶||



Programmierung Abspielliste MP3 CD

Switch on appliance

Choose

 
Press **ON / STANDBY**

DVD / USB / SD on the remote control

STOP ■ 2 x

PROG / MEM

The external screen immediately shows that it is connected:

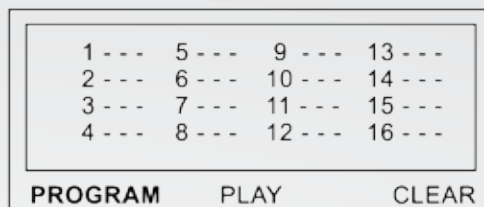

Press the **Numbers Button** to input the title and section at the current item. Go to the next item with

◀◀ TUNE DOWN resp. **TUNE UP ▶▶**

Confirm list

Press **ENTER**

Playback then starts automatically.

EN



USB and SD CARD

The appliance is equipped with USB and SD Card slots, this allows the playback of MP3 files. Connect USB or SD CARD (access top left).

Switch on appliance

Press **ON / STANDBY** 

Choose **USB / SD CARD**

Press **DVD / USB / SD** on the remote control or **FUNCTION** on the appliance repeatedly

Select folder and title

◀◀ TUNE DOWN resp. **TUNE UP ▶▶** or **UP ▲** resp. **DOWN ▼**

Start playback

Press **ENTER**

Interrupt playback

▶||

Select track

Press **◀◀ MEM -** resp. **MEM + ▶▶**

Fast forward or
reverse within

the actual track:

Press and hold **◀◀ TUNE DOWN** resp. **TUNE UP ▶▶**

Speed 2x 4x 8x 20x

Set the normal playback speed again: press **▶||**



USB and SD CARD

File playback options

File type can be selected:



Music files

Image files

Video files



Note Display shows number of tracks and directories for a short time and then starts automatically the playback. The appliance is compatible with USB 1.1 and 2.0 standards. It is possible that some USB sticks cannot be read, as they might not comply with these standards. The appliance supports max. 4 GB USB Sticks / SD Cards. The time of reading varies depending on the quantity of data. It can take up to 60 seconds.



CAUTION Switch off the appliance before removing the USB Sticks / SD Card. Do not use an USB FLASH DRIVE with this appliance. Always connect the USB without cable.



iPod

Insert appropriate iPod adaptor (accessory) to the dock and connect with the appliance.
The number on the dock adaptor shows which iPod will fit.

iPod touch	1+2. Generation	14 or 16
iPod classic	80/120/160 GB	9 or 10
iPod	5. Generation 30/60/80 GB	9 or 10
iPod nano	5. Generation 8/16 GB	18
iPod nano	4. Generation 8/16 GB	17

Switch on appliance and iPod docking station and connect iPod with docking station.

iPod

Press **FUNCTION** repeatedly

Start playback



Interrupt playback



Select track

◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶

Fast forward or
reverse within
the actual track:

Press and hold ◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶



iPod

- Never disconnect the iPod from the appliance during playback. First press **FUNCTION** and change source to avoid damage to your files.
- iPod can be used with the remote control on the iPod or on the appliance.
- When connected to the appliance the iPod automatically charges.



Note If an iPod Video is connected, this error message appears on the display:

The currently attached accessory is not supported by this iPod.

The audio functions can be used despite this message.



AUX


Connect external appliance (f. ex. mp3 Player) at the back and switch on both appliances.

Choose **AUX**

Press **FUNCTION** repeatedly on the appliance

 
Press **AUX / DOCK** on the remote control

Playback

Press 

Stop playback

Press **STOP** 



Playback

Press **REPEAT** repeatedly to select between the following options:

REPEAT 1

Repeat actual track

REPEAT DIRECTORY

repeat current folder


REPEAT ALL

repeat all titles (entire CD)



DVD

Switch on appliance

Press **ON / STANDBY** 

Choose 

Press **DVD / USB / SD** on the remote control or **FUNCTION** on the appliance repeatedly

Insert DVD. The display shows the current section number, scene and running time.

If the DVD has a Front Menu and has been inserted for the first time, it is possible to navigate in the menu with **◀◀ TUNE DOWN** resp. **TUNE UP ▶▶** or **UP ▲** resp. **DOWN ▼** respectively.

Interrupt playback



Stop playback

without saving

Press **STOP ■** 2 x

Stop playback

with saving

Press **STOP ■**

Section and scene are saved and start again at the next playback

Change scene / section

Press **◀◀ MEM -** resp. **MEM + ▶▶**

Fast forward or

–reverse

Press **◀◀ TUNE DOWN** bzw. **TUNE UP ▶▶** repeatedly

Speed 2x 4x 8x 20x

Slow-motion playback

Press **SLOW** repeatedly

Speed 1/2 1/3 1/4 1/5 1/6 1/7



DVD

Freeze-frame

Frames can be played back individually: Press **STEP / ALMUM+** repeatedly.

Setting the normal playback speed again: press ►||

A-B repetition

This function allows sequences to be recorded from A to B and played back again.

Frames can be played back individually: Press **STEP / ALMUM+** repeatedly.

Start recording Press **A-B / RDS**

Stop recording Press **A-B / RDS** again



Note If **A-B / RDS** is pressed while playing back the recorded sequence, normal playback starts again.

Audio Sprache

Audio language Press **AUDIO / STEREO** repeatedly

The audio language is shown on the display. The languages available depend on the DVD.

Sub-titles

Select sub-titles Press **SUBTITLE / TRACK-** repeatedly

The sub-title language is shown on the display. The languages available depend on the DVD.



DVD

Zoom

Select zoom

Press **ZOOM / ALBUM**- repeatedly

Zoom selection

Zoom 2 Zoom 3 Zoom 4 Zoom 1/2 Zoom 1/3 Zoom 1/4

If the DVD does not have a zoom option, the display shows

INVALID KEY

Camera angle

Select angle

Press **ANGLE / PLAYLIST**- repeatedly

If the DVD does not have an angle option, the display showsy

INVALID KEY

Display display (OSD)

Display information

Press **OSD**

Hide information

Press **OSD** again

Menu

Display menu

Press **MENU** or **TITLE / PLAYLIST+**

Navigate in the menu

◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶ or **UP** ▲ resp. **DOWN** ▼

Confirm selection

Press **ENTER**

 
EN



DVD

Playback after a desired time

Press **GO TO / Track+**

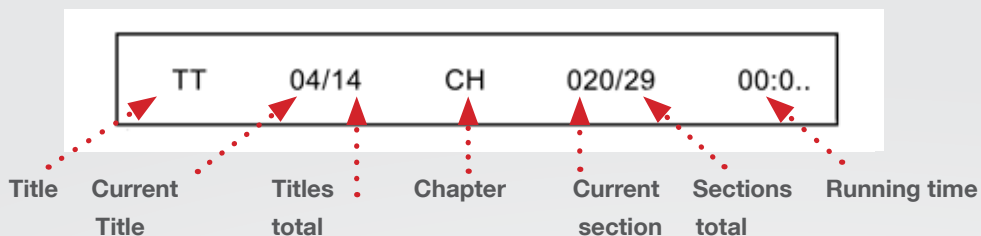

Navigate

Press **◀ TUNE DOWN** resp. **TUNE UP ▶**

Input numbers directly

Confirm

Press **ENTER**

Set normal playback again: Press **GO TO / Track+** again.

EN



DVD

Programming playback

Press **PROG / MEM**

	T	C		T	C		T	C		T	C			
1	--	--		5	--	--		9	--	--		13	--	--
2	--	--		6	--	--		10	--	--		14	--	--
3	--	--		7	--	--		11	--	--		15	--	--
4	--	--		8	--	--		12	--	--		16	--	--

Select title (T) and
chapter(C)

◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶ or **UP** ▲ resp. **DOWN** ▼

Input numbers directly

Confirm

Press **ENTER**

Choose **PLAY**

◀◀ **TUNE DOWN** resp. **TUNE UP** ▶▶ or **UP** ▲ resp. **DOWN** ▼

Confirm

Press **ENTER**

Set normal playback again: Press **PROG / MEM** again

Repeat

Repeat sections /
scenes / titles

Press **REPEAT**

Selection

REP OFF REP CHAPTER REP TITLE REP ALL

EN



DVD system settings

Basic

In DISC, USB or SD CARD mode with **SETUP** at the remote control go into the menu.



With **◀◀ TUNE DOWN** resp. **TUNE UP ▶▶** respectively select the symbol and call up the menu option with **DOWN ▼**. E.g. Audio.



With **DOWN ▼** call up the menu option and with **TUNE UP ▶▶** navigate in the sub-menu.



To quit the menu, press **SETUP** at the remote control.



DVD system settings

TV SYSTEM

Set the colour system of the TV

NTSC PAL AUTO (for Multi System TV sets)



SCREEN SAVER

Set ON or OFF. The screen saver comes on when playback is stopped, no DVD has been inserted or if Pause has been set.



VIDEO

Setting video options

INTERLACE-YUV DVD player connected to the TV set with a video cable.

P-SCAN DVD player connected to a Progressive Scan TV set with Y, PB or PR video cable.

S-VIDEO DVD player connected to the TV set with an S-video cable.



Note Select INTERLACE-YUV if Composite Video is connected at the TV set. Select P-SCAN if a video cable is connected to the TV set or an Interlace or Progressive Scan TV set is being used.



 
CAUTION Do not connect a video cable and an S-video cable at the same time.



DVD system settings

HD OUTPUT

make the settings if a DVD player is connected with an HDMI cable.

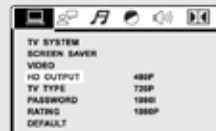

TV TYPE

 
Setting the picture format.



NOTE The picture format depends on the DVD and the TV set.

PASSWORD

The password option is blocked. Input 0000 to unblock it and confirm with **ENTER**. To input a password, first input the old password and then input a new 4-digit password.

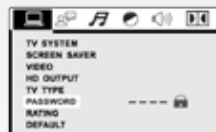




DVD system settings

Setting age limiting

 - 1 G All age groups
- 2 Level 2
- 3 PG Only under parental supervision
- 4PG 13 Not under 13, from 13-18 only under parental supervision
- 5 Level 5
- 6R Under 18 only under parental supervision
- 7 NC-17 For adults, not under 17
- 8 Only for adults

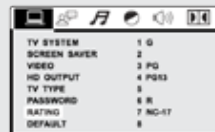

NOTE The option cannot be used if the password has not been unblocked.

RESTORE

Reset all settings.



OSD LANGUAGE

Set the display language and confirm with **ENTER**.



EN



DVD system settings

OP MODE

Setting the audio:

 
LINE OUT quieter

RF REMOD louder



DYNAMIC RANGE

The function can be set if music with a high dynamic range is being played back in a noisy environment. Quiet music becomes louder and loud music becomes quieter.

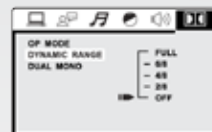

DUAL MONO (left & right)

Tone setting.



NOTE Mix Mono is used for karaoke.



DVD system settings

BRIGHTNESS

Set brightness.



CONTRAST

Set contrast.



SATURATION

Set saturation.



ANGLE SWITCH

Set angle.



EN



DVD system settings

DOWNMIX

Adjust speaker:


LT / RT	Dolby Digital
STEREO	2 channel tone
VSS	5.1 channel format



AUDIO OUT

Spdif / off	No audio signal from the coaxial output.
Spdif / Raw	DVD player is connected to an amplifier with a coaxial cable.
Spdif / PCM	DVD player is connected to 2 channel stereo amplifier.



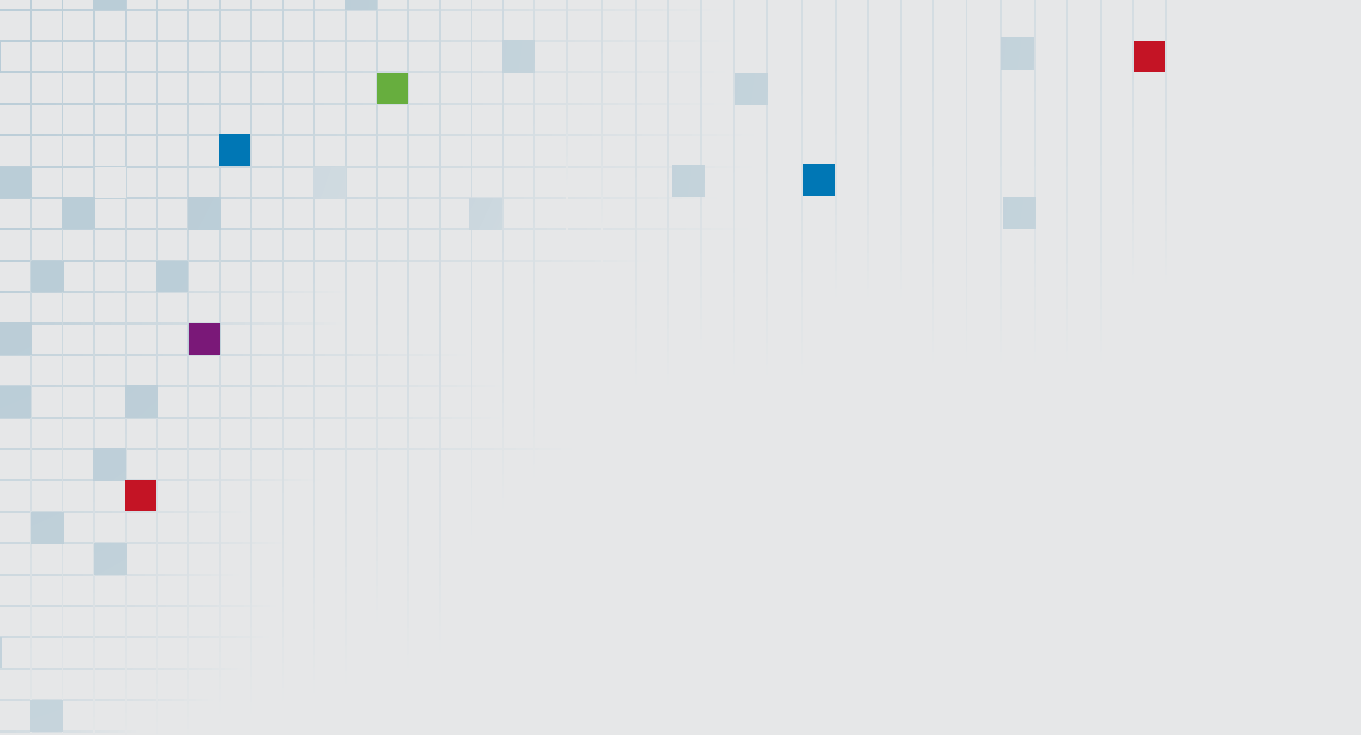 

Imported by:
CECONET AG
Hintermättlistrasse 1
CH-5506 Mägenwil